



190mm Mains Tester

Stock No.64510

Part No.4171D

INSTRUCTIONS

10/2014

Instructions for use:

- Testing range: 100 - 250V AC.
- Place blade end into live aperture and press your thumb against metal cap on handle.
- If supply is live, the neon bulb in the handle will light.
- Tester will not illuminate if placed in contact with neutral terminal, or if supply is dead.
- Always check bulb is working by using tester first on a live circuit.