



KEY No.	PART No.	STOCK No.	DESCRIPTION
1	YABTS3-01	71830	Side upper support bracket (long)(2)
2	YABTS3-02	71831	Front upper support bracket (short)(2)
3	YABTS3-03	71832	Side lower support bracket (long)(2)
4	YABTS3-04	71834	Front lower support bracket (short)(2)
5	YABTS3-05	71835	Leg upright (4)
6	YABTS3-06	71836	Fixing kit (1)

## ASSEMBLY

Remove from the packaging and inspect for damaged or missing parts.

Locate the four pairs of cross supports. The two shortest pairs are the upper supports, and the other longer two longer pairs are the lower supports.

The upper supports with the angled corners contain the mounting holes for the saw. The lower support stamped (A) runs parallel to this. The remaining pairs make up the upper and lower supports accordingly.

Assemble each leg to the upper supports (four bolts per leg). Pass the mushroom head bolt through the leg and locate the square shoulder to lock in place. With the support in place pass over the bolt a standard washer, a spring washer and a nut. Tighten only finger tight to begin with. Now assemble the lower supports to the legs (two bolts per leg) again only finger tight.

When complete, rest the assembled stand upright on level ground and allow the frame to settle before fully tightening all the fixings. Double check to ensure all the fixings are tight before mounting the saw onto the frame. With the saw in place use the four bolts and washers supplied. Fix in place with the remaining four washers, spring washers and nuts.

It is recommended that the stand be fastened to the floor where possible to ensure maximum safety and stability when operating the saw.